

OIL TEMPERATURE GAUGE KIT INSTALLATION PROCEDURE

Due to changes in the supplied gauge please use the following instructions for wiring the gauge.

CONNECTION OF WIRING

1. GROUND: Connect the ring terminal of black wire to the “-“ terminal of the gauge. Connect the other end of the ground wire to a vehicle ground using a ring terminal and sheet metal screw.
2. POWER: Connect the ring terminal of the red wire to the “+” terminal of the gauge. Connect the other end to a key-on 12 volt source using a splicer connector.
3. SENDING UNIT: Connect the ring terminal of the tan wire to the “S” terminal of the gauge. The other end will be connected to the sending unit after it is installed in the transmission pan.
4. LIGHT: Connect either one of the black wires from the gauge light to “G” terminal of the gauge. Connect the other black light wire to the panel light switch.

Refer to the included instruction sheet to complete the installation of the gauge.